



# PDP Afterglow Wired Xbox 360 Controller Button Replacement

This guide will provide guidance on how to replace missing and sticky buttons.

Written By: Joi Officer



## INTRODUCTION

This guide will provide step-by-step instructions for replacing the A, B, X, and Y buttons on the controller.



### TOOLS:



- [iFixit Opening Tools](#) (1)
- [Screwdriver](#) (1)



### PARTS:


- [Xbox 360 Wireless Controller Action Button Covers](#) (1)

## Step 1 — Case

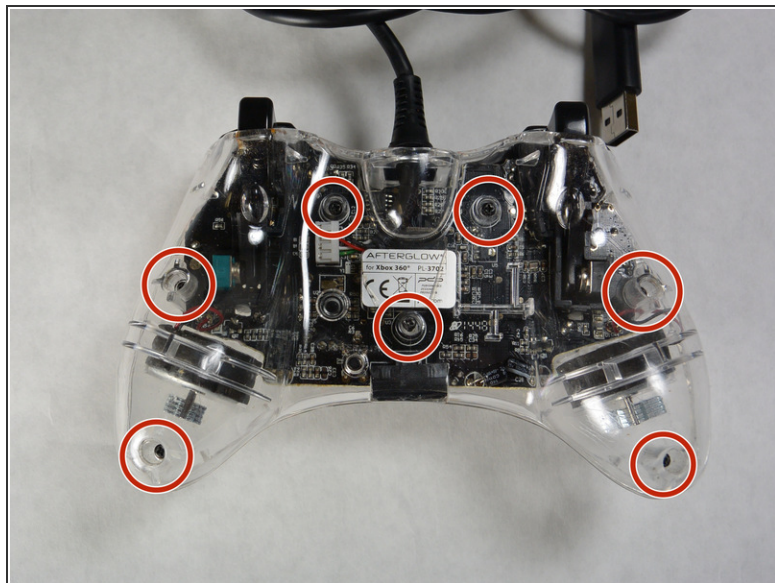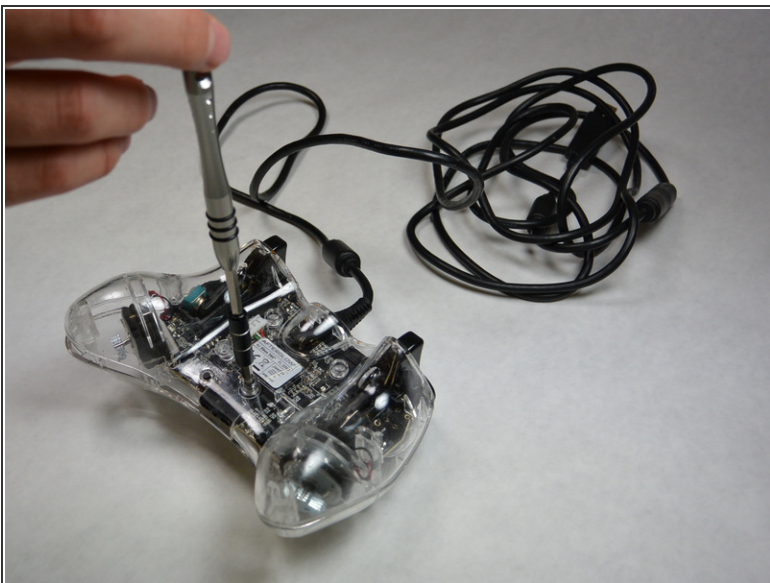

- Loosen the seven 11 mm Phillips #0 screws located on the back of the controller.

## Step 2

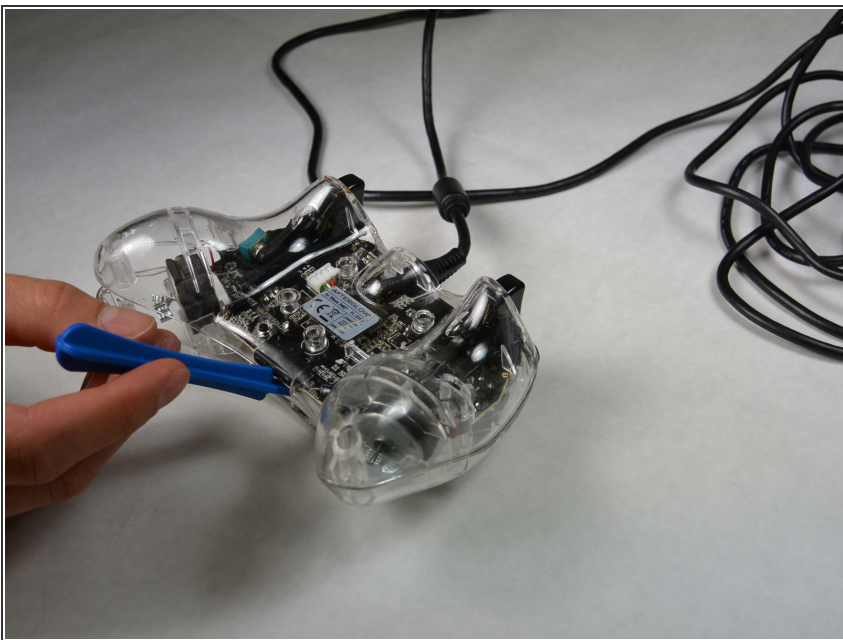

- Using a plastic opening tool, pry the back cover from the front.
- ⓘ The covers should separate without needing a plastic opening tool, but in some cases you may need to use it.



## Step 3





- Remove the top cover from the bottom and place next to each other.

## Step 4 — Button



- Remove the rubber button covers from the A, B, X, and Y buttons.

## Step 5

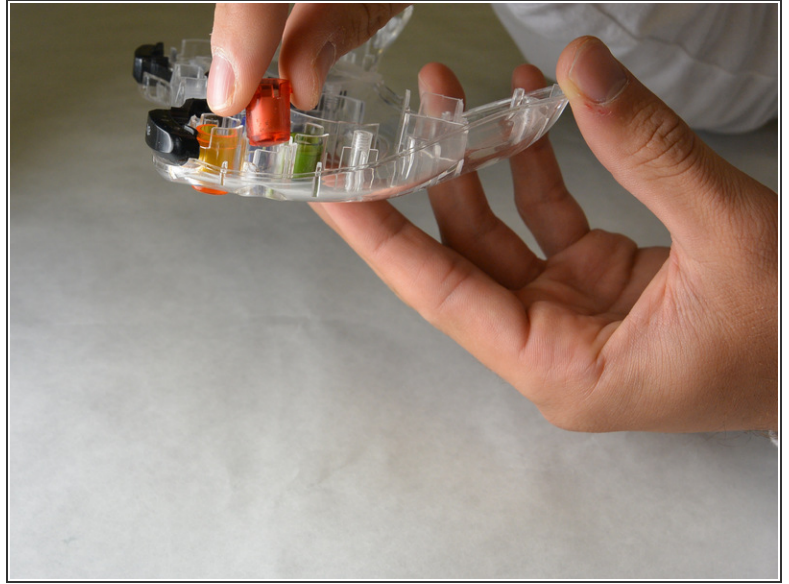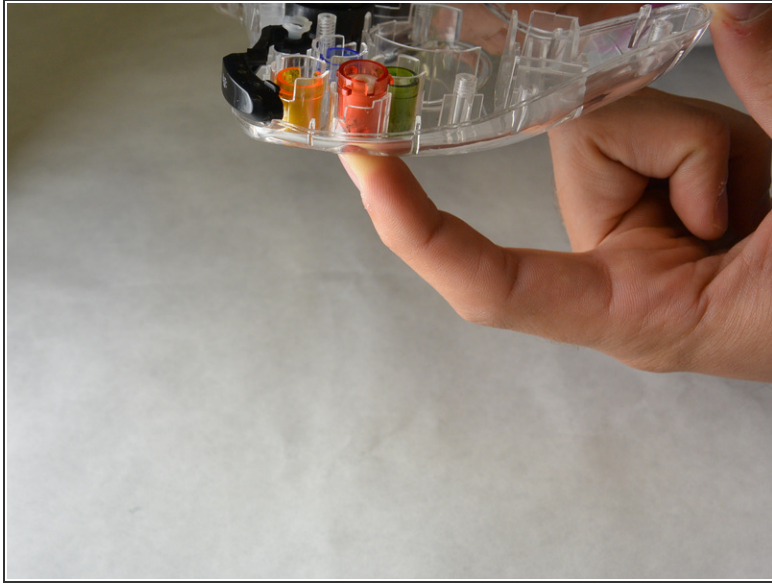

- Push up on the buttons from the front and pull them out from the back.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:38:02 PM.